

FIBER GLASS SCAFFOLD TOWER

The Ascend **FIBER GLASS Scaffold** is a unique design of towers, which allows us to access with the complete safety. An anti-slip steps and platform with the safer access methods to assemble and dismantle. The number of components in the Tower- Kit is sufficient for proper installation.

| TOWER HEIGHT | 2.2 | 2.3 | 3.8 | 4.3 | 5.3 | 5.8 | 6.3 | 7.3 | 7.8 | 8.3 | 9.3 | 9.8 | 10.3 | 11.3 | 11.8 | 12.3 |
|---|--------------|--------------|--------------|--------------|------------|--------------|--------------|--------------|--------------|--------------|--------------|------------|------------|--------------|--------------|--------------|
| PLATFORM HEIGHT | 1 | 1 | 2.5 | 3 | 4 | 4.5 | 5 | 6 | 6.5 | 7 | 8 | 8.5 | 9 | 10 | 10.5 | 11 |
| SIZE: WIDTH 135 CM LENGTH 200CM | | | | | | | | | | | | | | | | |
| COMPONENTS | | | | | | | | | | | | | | | | |
| UNIT WEIGHT | | | | | | | | | | | | | | | | |
| 15 CM WHEEL WITH ADJUSTABLE JACK & NUT | 4 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 20 CM WHEEL WITH 60 CM ADJUSTABLE JACK & NUT | 0 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| FIBERGLASS D4 RUNG FRAME 135 CM WIDE SB | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 |
| FIBERGLASS D4 RUNG LADDER FRAME 135 CM WIDE SB | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 |
| FIBERGLASS DIAGONAL BRACE 200 CM LONG SB | 2 | 2 | 4 | 6 | 8 | 8 | 10 | 12 | 12 | 14 | 16 | 16 | 18 | 20 | 20 | 22 |
| FIBERGLASS HORIZONTAL BRACE 200 CM LONG SB | 6 | 6 | 6 | 10 | 10 | 10 | 14 | 14 | 14 | 18 | 18 | 18 | 22 | 22 | 22 | 26 |
| FIBERGLASS DOUBLE WIDTH OPENING PLATFORM 200 CM LONG SB | 1 | 1 | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 5 | 6 |
| FIBERGLASS DOUBLE WIDTH NON OPENING PLATFORM 200 CM LONG SB | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 1 | 1 | 2 | 1 | 1 | 2 | 1 |
| FIBERGLASS STANDARD STABILIZER | 0 | 0 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| FIBERGLASS LARGE STABILIZER | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 180*109 CM LONG WOODEN TOE-BOARD ANTI-SLIP | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| FIBERGLASS U4 RUNG FRAME 135 CM WIDE SB | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 5 | 6 |
| FIBERGLASS U4 RUNG LADDER FRAME 135 CM WIDE SB | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 5 | 6 |
| FIBERGLASS 2 RUNG FRAME 135 CM WIDE 1 M HIGH | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| FIBERGLASS 2 RUNG LADDER FRAME 135 CM WIDE 1M HIGH | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| TOWER WEIGHT IN KGS | | | | | | | | | | | | | | | | |
| 2.0 MTR LONG | 106.2 | 114.3 | 179.6 | 198.9 | 218 | 247.3 | 266.2 | 285.3 | 314.6 | 336.7 | 355.8 | 385 | 404 | 423.1 | 452.3 | 471.3 |

MAINTENANCE RULES

- Ensure that the scaffold tower is kept clean.
- Grease all moving parts with commercial oil. Wipe off excess oil. Position the stabilizers symmetrically to obtain the MAXIMUM BASE
- Spigots and sockets should fit together with ease and be secured by an interlock clip.
- Check frames and braces, adjustable legs and boards for paint, grit, burrs etc. Remove any foreign substance with a light wire
- Where brace, ladder and platform hooks attach the frames, ensure that the frame rungs are kept clean.
- Ensure that all locking hooks function correctly. If necessary lubricate with light oil.
- Please check that spigot are in to the position and should fit easily into frames.
- The inside diameter of all hooks should be kept clean to ensure they fit to other components without being forced.
- If in any doubt about the proper use and maintenance of the scaffold tower equipment, consult the manufacturer.
- Do not misuse or abuse the scaffold tower with heavy objects, hammers etc. Do not throw components in and out of vehicles or to the ground when the tower is being dismantled. Such abuse may reduce the structural integrity of the scaffold tower. Adjustable leg's thread should be clean and lightly oiled. Under no circumstances damage or incorrect components shall be used, Either repair it or get replacement.

MOVING A TOWER :

- If you must move a tower, remove all materials and personnel. When moving a scaffold tower, force must always be moved from the base. The tower should only be moved manually on firm, level ground which is free from obstacles. Normal walking speed should not be exceeded during relocation. The ground over which a tower is moved should be capable of supporting the weight of the structure. Make sure tower height is not above 4 mtr while moving the tower. Recheck the tower level and reposition stabilizer before use.
- Check the location is firm and free from pot holes.
- Raise the stabilizer feet only enough (25mm) to clear the Obstructions.
- Wind speed should not exceed 29km/h(Beaufort force 4).
- Check that there are no power lines or obstruction overhead.
- Before each use check that the MAT is vertical or need readjustment.
- Whether the structure assembly is still correct and complete.
- That no environmental changes influence safe use of the MAT

USE OF STABILIZERS

Stabilizers are to be used, when specified, to guarantee the structural stability of the tower




- Fig 1**: ALWAYS ENSURE STABILIZER SIZE IS CORRECT AND ABLE TO SUPPORT TOWER. Lightly tighten the upper clamps above the third rung on each corner post. Position the lower clamp above the bottom rung. Ensure the lower arm is as horizontal as possible. Position the stabilizers so that the footpads are approximately equidistant from each other, as shown in Fig 1. Adjust the stabilizer and reposition the clamps as required to make firm contact with the ground. Ensure the clips with locking pin are in place. When in the correct position, tighten the clamps firmly.
- Fig 2**: To position the tower against a wall, do not remove the stabilizer; move parallel with the wall.
- Fig 3**: To position the tower in a corner, remove the inside stabilizer and place the outside two parallel with the wall.

MANUFACTURER OF ALUMINIUM & FIBER GLASS SCAFFOLD TOWERS AND LADDERS



"ULTIMA" TOWER INSTRUCTION MANUAL 3T METHOD

ALWAYS READ THE INSTRUCTION MANUAL FOR SAFER ASSEMBLY OF SCAFFOLD

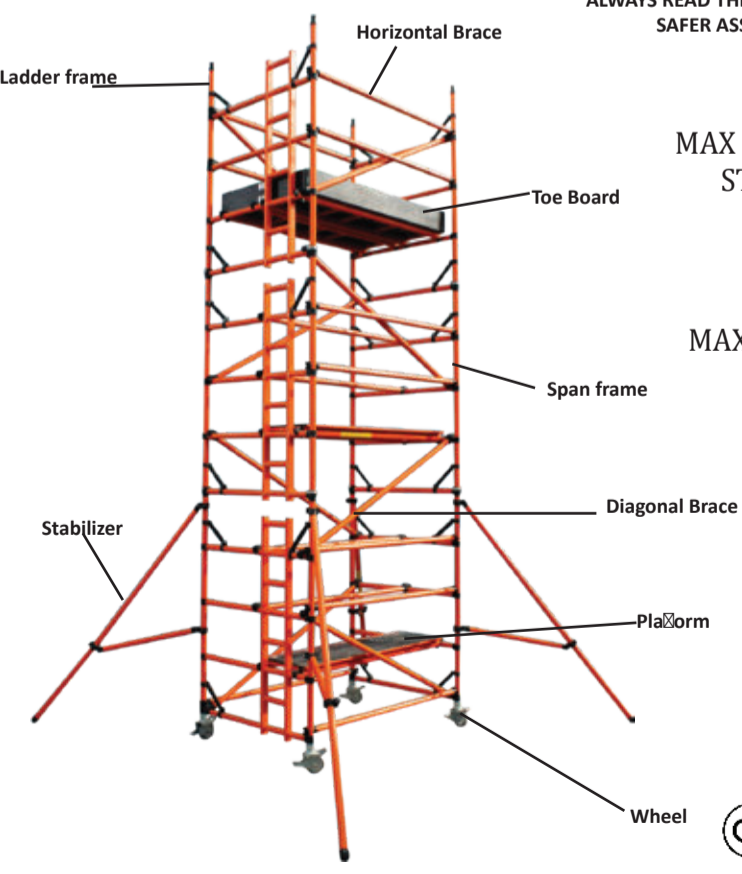

MAX SAFE WORKING LOAD STRUCTURE 750 KG

MAX SAFE WORKING LOAD PLATFORM 250 KG



PASMA(UK)APPROVED TRAINING CENTER

ASCEND ACCESS SYSTEMS SCAFFOLDING L.L.C.

Tel : +971 4 885 5001
 Toll Free : 800 722 33653
 Email : sales@ascenduae.com
 Website : www.ascenduae.com

- A risk assessment has been done and safety equipment (Rope etc) and auxiliary tools are available on site for erection and dismantling the tower.
- The ground condition will take the working load as specified.
- The location of tower should be checked to prevent hazards during erection & dismantling, moving and while working on the tower. Level and slope, obstruction and wind condition should be checked.
- Minimum 2,3 persons are required to safely erect and dismantle the tower.
- Check instructions before use. Mobile access working towers may only be erected and dismantled by person competent for working on movable tower.
- Do not use any scaffold tower which is damaged, which has not been properly erected, which is not firm and stable, and which has any missing or damaged parts.
- Do not erect a scaffold tower on unstable ground, slopes or objects such as loose bricks, boxes or blocks. Only a sound rigid footing must be used.
- Ensure that the scaffold tower is always level and the adjustable legs are engaged. Check that you have taken all necessary precautions to prevent the tower being moved, or rolling away. Always apply all castor brakes or use base plates.
- Ensure that all frames, braces and platforms are firmly in place and that all locking hooks are functioning correctly. Ensure that all frame locking clips are engaged. If any missing, replace them. Never mix parts or components from other manufacturers. Damaged components should be replaced with the new components.
- It is recommended that the vertical distance between two platform level is 2mtr. Maximum vertical distance between platform level must not exceed 4 mtr.
- Ensure that the scaffold tower is within the maximum platform height stated, and that the appropriate stabilizers are fitted.
- Outdoor scaffold towers should, wherever possible, be secured to a building or other structure. It is good practice to tie in all scaffold towers of any height, especially when they are left unattended, or in exposed or windy conditions.
- A free standing scaffold tower must not be used in winds stronger than 17mph(7kph) Beaufort scale 4. Be cautious if erecting or using the tower in open places, such as hangers or un-cladded buildings. In such circumstances the wind forces can be increased, as a result of the funneling effect.
- Do not use sheeted towers.
- If an overhead hazard exists, head protection should be worn.
- Do not lean ladders against the tower, or climb outside of tower. Whatever your intended access system, it should only be used inside the tower.
- Never climb on horizontal or diagonal braces. Do not gain access or descend from the working platform other than by the intended access system.
- Do not work from ladders or stairways, they are a means of access only.
- Always use components from inside the tower.
- When lifting materials or components always use reliable lifting materials to ensure there is no possibility of it falling.
- Always tie the tower when it is left unattended.
- Guardrails and toe boards must be fitted to the working platforms.
- Never jump on to or off platforms.
- Never place the working platform on the guardrail frame. Always keep double height guardrail at each platform levels, never stand on an unguarded platform.
- DO NOT exceed the safe working load of the platform or structure by accumulating debris, material tools on platforms as these can be a significant additional load.
- The tower should always be accessed from the inside using the ladder frame, never climb up from outside. Ensure that the locking hooks on the platform are functioning correctly.
- Beware of horizontal forces (e.g. when using power tools), which could generate instability or overturning of the tower. Maximum horizontal force 20kg.
- Should you require additional platform height, add further frames. NEVER extend your adjustable legs to achieve extra height, these are for levelling only. NEVER use a ladder or other objects on the platform to achieve additional height.
- Do not throw the scaffold parts, always lower them to the ground.
- Mobile towers are not designed to be lifted or suspended. Permissible load according to scaffold load group is 200 kg/m2.
- It is not permissible to attach and use hoisting facilities on towers, unless specifically provided for by the manufacturer.
- According to HD 1004 the double width tower must not be exceeded 12 mtr to top platform for indoor use and 8 Mtr platform height (working height 10 mtr) for outdoor use.
- For single width tower maximum working height for both interior and exterior work is 8 mtr.
- If the platform height reaches more than 6 mtr for single width and 8 mtr for the double width scaffold, then it should be secured against the wall prior to use.
- Always tie to a solid structure, while tying the tower attach a tie at 4 mtr interval.
- The maximum working load on the Ascend span 50 is 750 kg for overall structure (including tower self weight) and 250 kg evenly distributed on the platform. This must not be exceeded.
- Always take care of scaffold tower equipment. Remember your safety depends on the safe erection and use of the equipment.

ULTIMA TOWER ASSEMBLY INSTRUCTION MANUAL

The law requires that the personnel erecting ,dismantling Or altering the tower must be competent. Any person erecting Ascend Mobile Tower must have a copy of this guide.



Step1

Fit Caster wheel into base frame & apply brake, Attach horizontal Brace on lower rung of span frame & ladder frame on each sides. Brace Hook must face outside from inside.



Step 2

Fit Diagonal brace from 1st rung to 3rd rung of frame on both sides in opposite direction. Diagonal brace must be aligned (zig-zag pattern)



Step 3

Fit Trapdoor on 2nd rung .



Step 4

Sitting on the Platform attach 2 Horizontal brace on 3rd rung & 4th rung near the platform on both sides



Step 5

Standing on the guarded platform, Attach 4 rung span & Ladder Frame on the lower Frame. Make sure Ladder Frame are in Line.




Step 6

Engage Locking Pins .



Step 7

Attach Diagonal Brace from 4th rung to 6th rung on both sides in opposite direction. Diagonal brace must be aligned .

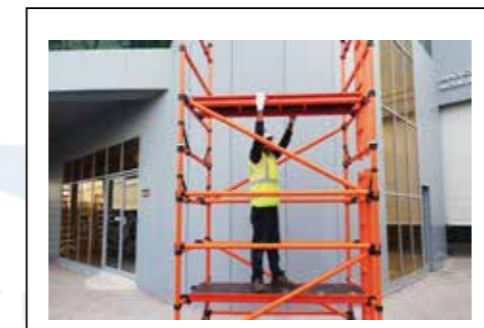

Step 8

Standing on the guarded Platform , fit the 2nd Trapdoor Platform on the 3rd rung from the Top.



Step 9

Fit the stabilizer to the base unit, adjust the leg of stabilizer to give firm support to the ground. Position the Stabilizer so that the foot pads are approx equidistant from each other at approx 45 degree for maximum



Step 10

Sitting on the Trapdoor opening of the Platform. Fit Horizontal Brace on 1st and 2nd rung from top on both sides near the platform.



Step 11

Continue to build the tower using the 3T method, Same as step 5,6,7,8 and 10. Till the desired height is achieved.



Step 12


Sitting on the Trapdoor opening of the Platform fit horizontal brace on 1st and 2nd rung from top on both the open end of platform .




Step 13

Fit the toe board. Slide the side board into the correct slot in the board. Ensuring the object shouldn't fall and trap door opens fully


ILLUSTRATION



1)Brace lock - Sort the braces into horizontal and diagonal braces, the diagonal braces are slightly longer in size.

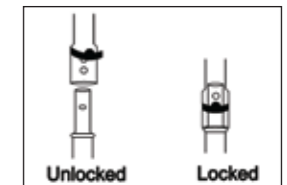

2)Snap pins - Unlock the interlock Clips on all frames. When installed, always move the interlock clip to the "Locked" Position.

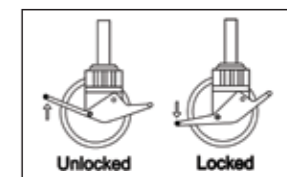

3)Wheel lock - Install castor / leg assembly to frame by pushing the leg into the frame tube. This Should be done with manual force only, no tools. Lock Castors before ascending any part of the tower.

Dismantling- Please Dismantle the Tower reverse from build process.